

Installation and Maintenance of A.R.I.'s K-014/ K-100 High Pressure Air & Vacuum Valves

A. Installation

- A.1 The air valve will be mounted on a riser, connected to the **top** of the pipe.
- A.2 An isolating valve will be installed below the air valve.
- A.3 Washers must be be installed under bolts and screws to protect the Halar coating.



B. Handling and Storage

During handling and storage, valve must be wrapped with a protective jacket to avoide any d coating amage.

C. Basic, Periodic, Maintenance

- B.1 Shut the isolating valve below the air valve.
- B.2 Unscrew the bolts (2) that connect the valve cover (3) to the body (8).
- B.3 Wash the body and the cover in clean water in order to remove coarse grime or accumulated scale. Check if the seal (5), the seat (6) , or the float (7) are dirty, and clean them.
- B.4 Reinstall in reverse order and fasten and tighten all bolts.
Make sure to re-assemble the components correctly.
- B.5 Open the isolating valve beneath the air valve.

